



Free-Glide™ Curved & Flat Front

A Front Boss is included in the price of the FreeGlide. The standard Front Boss sizes are shown in the table below. Custom sizes are available for non-standard pipes and chutes.

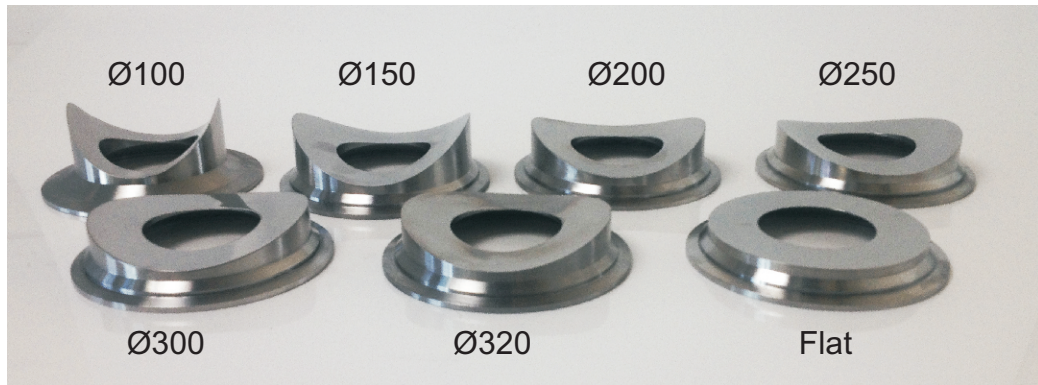

The Front Boss and the FreeGlide both have 5" Ferrules (BS4825-3).

The FreeGlide is supplied with a 5" clamp and a 5" gasket (available in silicone, Viton or EPDM)

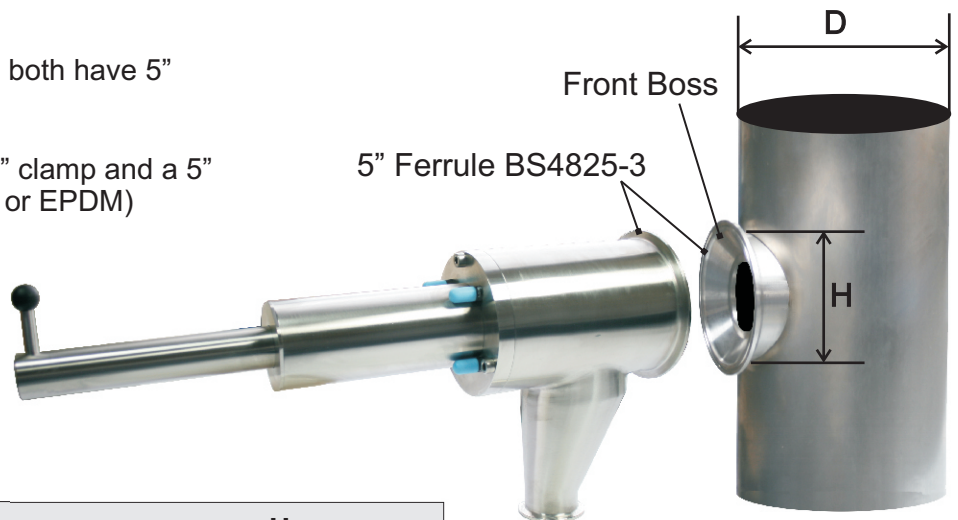

Part Number of Front Boss	D Internal Diameter of Pipe	H Diameter of hole cut in pipe
SS400163	100mm	98mm
SS400023	150mm	120mm
SS400397	200mm	120mm
SS400398	250mm	120mm
SS400399	300mm	120mm
SS400400	320mm	120mm
SS400385	Flat	120mm

Installation of the Front Boss

The FreeGlide is designed to seal against the Front Boss so it is important that the Front Boss is installed correctly.

1. Cut a hole in your pipe (see table for hole diameter)
2. Offer up the Front Boss so the curved face of the Front Boss matches the internal curve of the pipe
3. Weld the Front Boss into position

